



OmniSight Connection Diagram

This diagram shows a single-channel OmniSight system. A multi-channel system will incorporate 2 or more cameras and transmitters, and a receiver for each.

Each receiver connects to an input on the DVR (which has four input channels), and the TV or monitor connects to the monitor socket on the DVR using the scart lead provided.

The line-of-sight transmission range of the OmniSight transmitters is around 80m using the built-in stub aerials. This can be increased to about a kilometre with more powerful aerials on the transmitters and receivers. Call us on 01573 440761 for advice.

